PHILIPS

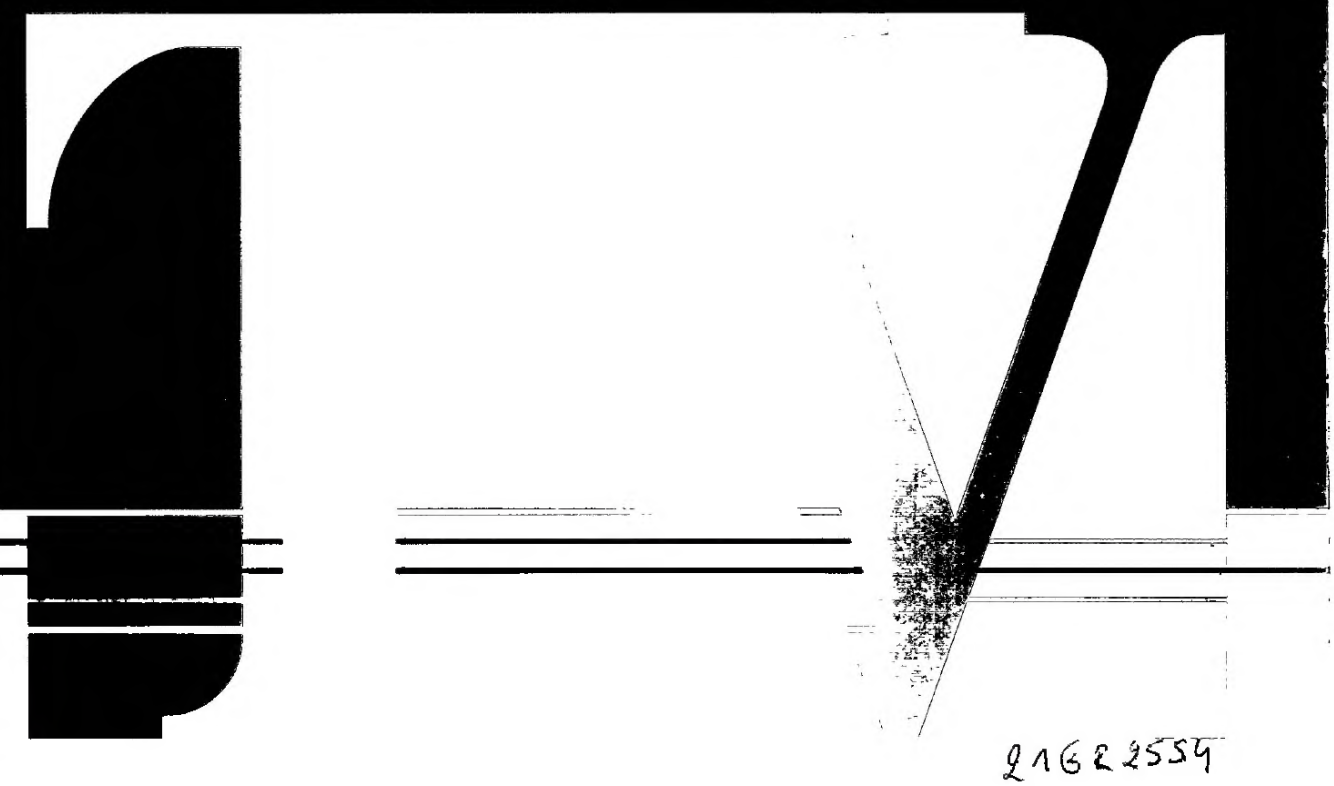

2162554

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Contents

Installing	Page 1
Adjusting	Page 2
Operating	Page 3
Additional features	Page 6
General information	Page 10

Introduction

TV Indicates actions that are performed using the TV buttons or sockets.

Indicates actions that are performed using the remote control handset.

1 Installing the TV

TV To install the TV

. Remove any packaging from the TV.
. Find the remote control handset and indoor aerial (if supplied) within the packeging.
. Place the TV on a solid base (e.g. a TV/video cabinet).
. Leave at least 3 cm around each side of the TV for ventilation.

GB

TV To connect the TV

IMPORTANT: The TV is only suitable for a mains voltage of 220/240 V ~, 50 Hz. (Consult your dealer if the mains supply is different).

. Connect the TV to the mains supply socket.

. Connect the aerial plug to the ⊐ socket located at the back of the TV.

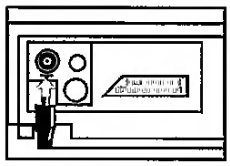

Your TV is equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur.
Further improvement of reception could be optained by:
- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

Downloaded from www.Manualslib.com manuals search engine

2 Adjusting the TV

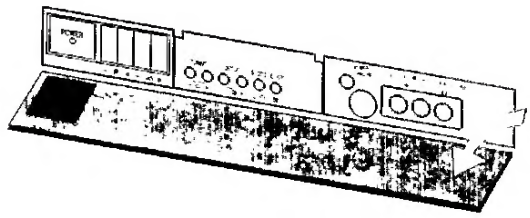

The control buttons needed for adjusting the TV located behind the control panel cover on the front of the TV.
To open simply press the cover. It should be closed again once the required adjustments have been made.

To switch the TV on

. Press the ⏻ power button on the front of the TV.
. If the GREEN colour is displayed on the light below the screen then the TV is switched on.

. If the RED colour is displayed on the light below the screen then you must press the
− or + **P** program button.
The TV will then switch on and the GREEN colour will be displayed on the light (for further information refer to the section 'to select stand-by mode').

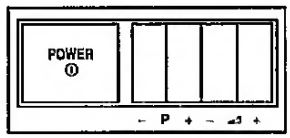

To switch the TV off

. Press the ⏻ power button on the front of the TV.
(If you want to switch off the TV temporarily refer to the section 'to select stand-by mode').

To insert batteries in the remote control handset

. Remove the battery cover on back of the remote control handset.
. Insert the two batteries supplied (type LR03 1,5 V).
. Replace the battery cover.
The remote control has a gravity switch inside. When moving the remote control quickly one can hear the switch moving. The noise does not affect the performance. It will work properly as shown on drawing A (horizontal) .It is advisable not to use the RC as shown on drawing B (vertical).

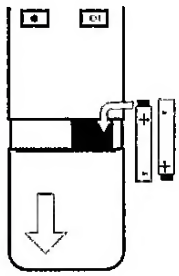

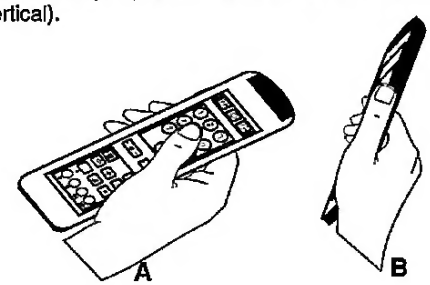

To test the remote control handset

On the side of the remote control there is a TV-VCR (videorecorder) switch.
To use it with the TV select the TV mode.

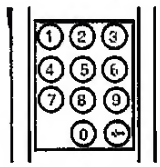

. Switch on the TV.
. Hold the remote control handset and direct it towards the GREEN coloured light below the TV screen.
. Press any **digit** button on the remote control handset. The GREEN coloured light should 'flash' ORANGE each time a button is pressed.

Downloaded from www.Manualslib.com manuals search engine

To store TV stations on program numbers

(Up to 60 TV stations can be stored on program numbers using the following method).



1. Press the ◇◇ button, so that information is displayed on the screen about the current program number.

2. Press the ⊡ button so that the TV **automatically** searches until a TV station is found and displayed on the screen. Press this button again if you want to continue searching.

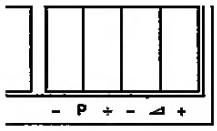

3. Select the required program number (0 to 59) by pressing the − or + P program button. The selected program number is displayed on the screen.

4. Press the ◇◇ button to store this selection. The program number information is now removed from the screen.

Repeat steps **1** to **4** until all the TV stations you require have been stored on program numbers.

To fine tune the picture quality

(The picture from a TV station or a device such as a video recorder may be affected by interference, e.g. from other strong signal sources).
The picture quality may be improved using the following method:

1. Press the ◇◇ button to display the program number information.

2. Press the − or + ⊡ button, and release it immediately, so that the picture is fine tuned.

3. Press the ◇◇ button to store these changes.

GB

3 Operating the TV

You can now operate your TV either using the remote control handset or directly using the TV buttons.

. Switch on the TV by pressing the ⏻ power button on the front of the TV.

To display picture and sound information

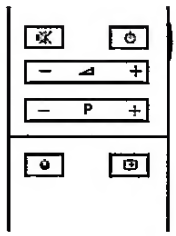

(The 'On-Screen-Display' allows you to see the information stored for a particular program number and TV station).

. Press the ⊡ button to display the information on the screen.

If you now make changes to the picture and sound using the appropriate buttons, then a **moving bar** is displayed which represents these changes as they are being made.

. Press the ⊡ button again to switch off the information display.

Downloaded from www.Manualslib.com manuals search engine

To select TV stations using program numbers

After the TV is switched on:

To select TV stations using program numbers 0 to 9

. If necessary press the -/-- key to return to setting one figure.
. Press the appropriate digit button on the remote control handset. The selected program number and TV station now appear on the screen.
. Press a different digit button to make another selection.

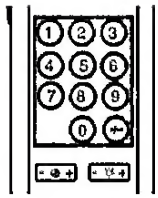

To select TV stations using program numbers 10 to 59

. If necessary press the -/-- key to return to setting two figure.
. Press the -/-- button.
'P—' is displayed on the screen.
. Press two appropriate digit buttons.
The selected program number and TV station now appear on the screen.
. Repeat the above procedure to make another two-digit program selection.

To select a lower or higher program number

. Press the + P button to select a higher program number.
. Press the − P button to select a lower program number.



To select TV stations using the TV buttons

. Press the + P program button to select a higher program number.
. Press the − P program button to select a lower program number.

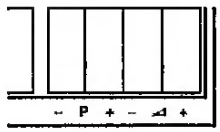

To change the picture and sound settings

When the TV is first switched on the picture and sound settings are always at preferred or 'personal preference' values.

To change the volume

. Press the + button to increase the volume.
. Press the − button to decrease the volume.

To change the contrast of the picture

. Press the + button to increase the amount of contrast.
. Press the − button to decrease the amount of contrast.

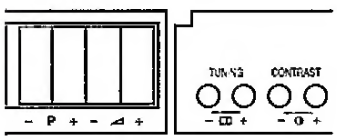

To chenge the volume

. Press the + button to increase the volume.
. Press the − button to decrease the volume.



To change the colour intensity

. Press the + button to increase the colour intensity.
. Press the − button to decrease the colour intensity.

To change the brightness

. Press the + button to increase the brightness.
. Press the − button to decrease the brightness.

To return to the standard values

. Press the PP button.

Downloaded from www.Manualslib.com manuals search engine

To store your own personal preference (PP) values

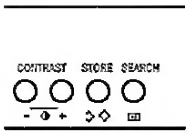

. Press the ◇ ◇ button on the TV to display the program number information.
. Change the picture and sound settings (e.g. volume, contrast) using the remote control handset or TV controls.
. Press the ◇ ◇ button on the TV to store these changes. The program number information is now removed from the screen.

To select stand-by mode

The TV can be put into stand-by mode in three ways:

1. Directly

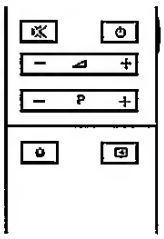

. Press the ⏻ button. The RED colour is displayed on the light located below the screen, and the TV is put into stand-by mode.

2. Using the timer
(With this method you can select a time period after which the TV switches to stand-by mode).
. Press the ⏻ button until the required time period is displayed on the screen (the time period can be set in steps of 15 minutes starting from 90 minutes downwards).

During the final minute of the selected time period, '01' is displayed on the screen informing you that the TV is going to switch to stand-by mode. At the end of this time period the TV switches to stand-by mode and the RED colour is displayed on the light located below the screen.

3. Automatically
Approximately 15 minutes after a TV station stops broadcasting ('close-down') the TV switches itself automatically to stand-by mode.

GB

***NOTE:** Switch off your TV overnight instead of leaving it on stand-by.*
You save energy and the picture tube is demagnetised which supports good picture quality.

To switch on the TV from stand-by mode

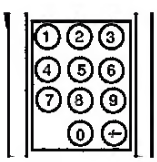

. Press a digit button on the remote control handset so that a program number is selected.

Or

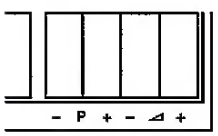

. Press the − or + P button located on the front of the TV.
The RED colour light (located below the screen) changes to GREEN when the TV is switched on from stand-by mode.

To switch off the sound

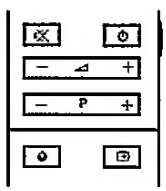

. Press the 🔇 button to switch off ('mute') the sound.
🔇 is displayed on the screen.
. Press the 🔇 button again to switch the sound on.
🔇 is removed from the screen.

Downloaded from www.Manualslib.com manuals search engine

4 Additional features

Teletext is an information system that displays text on your TV screen. Using the Teletext information system you can select a page of information on a subject that is available in its list of contents (index).

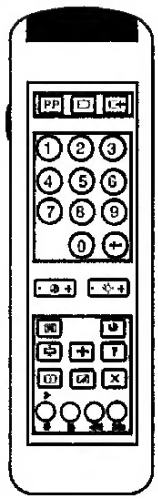

To operate Teletext

. Select a TV station on which Teletext is being transmitted (check with a TV programme guide).
. Press the button. Usually the list of contents (index) is displayed on the screen.

The following procedures epply only after Teletext has been selected:

To select a page of Teletext
. Press the appropriate digit buttons for the required Teletext page number.

The selected page number is displayed et the top left corner of the screen. The Teletext page counter searches until the selected page number is displayed on the screen.

To return to the index page
. Press the button to directly select the index page.
. Alternatively select the page number of the index (e.g. page 100).

To select Teletext with e TV programme
. Press the button. The text is now superimposed over the TV programme on the screen.
. Press the button again to return to the Teletext page.

To switch between Teletext and the TV programme
. Press the × button. The TV programme appears, and **TXT** is displayed in the top left corner of the screen.
. Press the × button again to return to the Teletext page.

To select double height text
. Press the button for the top half of the information pege to be displeyed in double height text.
. Press the button for the bottom half of the information page to be displayed in double height text.
. Press tha button egein for the full pege of normal height text.

To reveal 'concealed' information
(Sometimes a Teletext page contains concealed information, for example in a quiz or puzzle).
. Press the ? button. The concealed information is then displayed on tha screen.
. Press the ? button again so that the concealed information is removed from the screen.

To stop an automatic page-change
(More information may follow the page of Teletext you have selected; and it is automatically displayed after a short period of time).
. Press the button to stop the automatic page-change.
. Press the button again so that the next page of text can be displayed.

Downloaded from www.Manualslib.com manuals search engine

To select *a* time-planned page
(You can select a page of Teletext information which can then be displayed on the TV screen at a certain time).

Select the required Teletext page.
. Press the ◕ button.
. Select the required time by pressing four **digit** buttons (e.g. 20.10).
. Press the ✕ button to return to a previously selected TV programme.

When the selected time is reached:

Either
The required Teletext page is superimposed over the TV programme.
. Press the ✕ button to remove the TV programme from the screen.

Or
The time is displayed in the top right corner of the screen.
. Press the ✕ button to display the Teletext page on the screen.
. Press the ◕ button to cancel this 'time-planned page' selection.

To select a subcode page
(Subcode pages *are* sub-sections of long Teletext pages that can only be displeyed on the screen one section at a time).
. Select the required Teletext page.
. Press the ◕ button.
. Press a **digit** button (for the required subcode page).
. If the subcode page is not immediately available then press the ✕ button to return to the TV programme.
When the subcode page becomes available the subcode number is displayed in the top left corner of the screen.
. Press the ✕ button to display the subcode page.

***Note:** Time-planned and subcode pages are only available with certain pages on some Teletext broadcasts.*

To select e Teletext subtitled TV programme
(Subtitles can only be displayed on the screen if the TV station adds this facility to the TV programme - check with *a* TV programme guide).

. Select the Teletext page indicated in the TV progremme guide.
The TV programme with subtitles now appears on the TV screen.

Fastext operetion
(Sometimes a page of Teletext information can be selected quickly).
. The next sequential page of Teletext information can be selected by pressing the RED button (e.g. page 101 can be selected after page 100).

Or

The subject-heading for the information may have a particular colour, or can be placed inside a coloured box.
. Press an appropriate RED, GREEN, YELLOW or BLUE button.

***Note:** If your TV is equipped with Fastext you cannot select a time-planned page.*

To exit Teletext

. Press the ▭ button. The previously selected TV station appears again on the screen.

Downloaded from www.Manualslib.com manuals search engine

To display the time



. Press the ◕ button. The current time is displayed in the top right corner of the screen (e.g. 21.00).
. Press the ◕ button again to remove the time display.

Note: *The time can only be displayed when Teletext is available on the selected TV station.*

To connect a video recorder

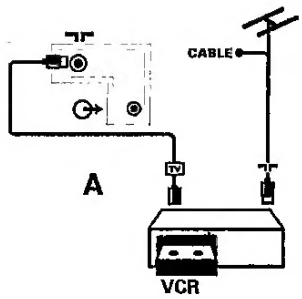

(First you must refer to the opereting menual supplied with your video recorder for connection details).

. Switch off the TV before connecting the video recorder.
. Connect the TV aerial cable to the ⌐r input on the video recorder.
. Connect one side of the cable supplied with the video recorder to the **TV** output of the video recorder and the other side of the cable to the ⌐r input of the TV.

Additionelly



. A video recorder or camcorder can be connected at the video/audio input sockets (cinch type) at the front of the TV for 'play-back' of tapes only.

Or

. The video recorder can also be connected at the Euroconnector socket at the back of the TV (a support-bracket is also provided for the Euroconnector cable on the back of the TV).



Note: To obtain an optimal sound and picture signal we advise not to connect the video/eudio input sockets and the Euroconnector simultaneously.

To store the video recorder signal on a program number

. Switch on the TV.
1. Insert a pre-recorded tape in the video recorder, and press the 'PLAY' button on the video recorder.



2. Press the ◇◇ button so that the program number information is displayed.

3. Press the ▶▮ button so that the TV automatically searches for the video signal.
•If necessary press this button again until the video signal is located.

4. Select en available program number by pressing the − or + P program button on the TV.

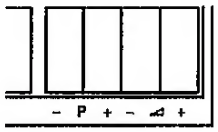

5. Press the ◇◇ button to store the video signal on the selected program number.

6. Press the 'STOP' button on the video recorder.

To select the program number for the video recorder signal

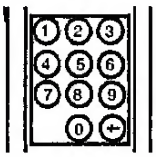

. Press the appropriate **digit** button (for the program number on which the video signal has been stored).
. To return to normal TV operation press another **digit** button to select a TV station.

If the Euroconnector or video/audio input sockets are used then refer to the section 'To select the device signal'.

Downloaded from www.Manualslib.com manuals search engine

To operate a video recorder using the remote control handset

(The following information only applies if your video recorder uses the RC5 system for the remote control handset).

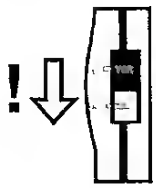

On the side of the remote control there is a TV-VCR (videorecorder) switch.
To use it with the videorecorder select the VCR mode.

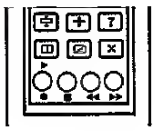

. Press the ▶ button to 'PLAY' the video cassette.
. Press the ● button to 'RECORD' on the video cassette.
. Press the ■ button to 'STOP' the video cassette.
. Press the ◀◀ button to 'REWIND' the video cassette.
. Press the ▶▶ button to 'FAST FORWARD' the video cassette.

To connect other devices (e.g. computer, TV game, CD Video player)

(First you must refer to the operating manual supplied with the device).

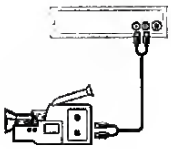

Either
A device with video (CVBS) output can be connected to the video/audio input sockets on the front of the TV.
Or
A device with a Euroconnector can be connected to the Euroconnector socket at the back of the TV.
Or
A device can be connected to the ⌐ socket at the back of the TV.

. Switch off the TV.
. Connect the device.
Or
Audio devices can be connected to the audio-output socket ('cinch' type) on the back of the TV adjacent to the aerial socket.

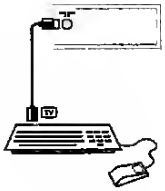

To select the device signal

. Switch on the TV.
If the video/audio input sockets are used then:
. Press the ⇨ button so that EXT 1 is displayed on the screen.

When the Euroconnector is used then the device signal is available in either external mode EXT 1 or EXT 2.
. Press the ⇨ button so that EXT 1 is displayed on the screen.

Or
. Press the ⇨ button **again** so that EXT 2 is displayed on the screen.
. To return to TV operation press the ▭ button.

***Note:** It is **not** possible to search for a device signal using the ⊞ button when EXT 1 or EXT 2 mode is selected.*

If the ⌐ socket is used then the signal must be stored on a program number before it can be selected (refer to the section 'to store the video recorder signal on a program number').

Downloaded from www.Manualslib.com manuals search engine

To connect headphones

(The headphones used must be 8 to 1000 ohm, impedance and with a 6.3 mm diameter jach plug).

. Connect the headphones jack-plug to the socket located on the front of the TV.



Note: The loudspeaker is switched off automatically when the headphones are connected.

5 General information

To clean the TV screen

. It is possible to clean the TV screen using a slightly damp chamois leather.
Never use aggressive cleaning agents.

Fault indication

IMPORTANT: Never attempt to repair a faulty TV yourself; always consult a skilled TV service engineer.

If the TV does not give the desired picture or sound quality after switching on then check that:
- the aerial is connected properly;
- all controls and buttons are selected correctly;
- the selected TV station is not 'closed-down';
- the TV is not incorrectly switched to EXT 1 or EXT 2;
- the sound is switched on (not 'muted').

Switch off the TV if:

- Indication F0, F1, F2, F3, F4, F5, F6 or F7 is displayed on the screen.
- A bright white line is displayed across the screen.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

GB	**IDENTITY CARD**	This card, together with the terms of guarantee (to be provided by your dealer), forms the full certificate of guarantee for this appliance
D	**GERÄTE-KENNKARTE**	Diese Karte ist, zusammen mit den Garantiebestimmungen, die Ihr Händler Ihnen aushändigt, Ihr Garantieschein für dieses Gerät
F	**CARTE D'INDENTIFI-CATION**	Associée aux conditions de garantie (qui vous sont remises par le revendeur), cette carte constitue le certificat de garantie de cet appareil
NL	**INDENTIFI-CATIEKAART**	Deze kaart vormt, samen met de garantievoorwaarden (welke door uw dealer verstrekt worden), het garantiebewijs voor dit apparaat
I	**CARTA D'IDENTIFI-CAZIONE**	Questa cartolina rappresenta insieme alle condizioni di garanzia (da consegnare dal vostro rivenditore) il documento di garanzia per questo apparecchio
E	**TARJETA DE INDENTIFICACIÓN**	La garantía de este aparato se compone de esta tarjeta y de las condiciones de garantía que le entregará su concesionario.
P	**CARTÃO DE INDENTIFICAÇÃO**	Este cartão, em conjunto com as condições de garantia em vigor (explicadas pelo seu vendedor) constituem o certificado de garantia do seu aparelho
DK	**I.D. KORT**	Dette kort, udfyldt af Deres forhandler, er tilstrækkelig garantidokumentation for dette apparat
N	**IDENTIFIKA-SJOSKORT**	Dette kort, sammen med garantibetingelsene (som De får av forhandleren) utgjør garantibeviset for dette apparat
S	**IDENTIFIERINGS-KORT**	I Sverige gäller särskilda konsumentbestämmelser. Var vänlig kontakta radiohandlaren för information
SF	**TUNNISTUS-KORTTI**	Tämän laitteen takuutodistus muodostuu tästä kortista ja takuuehdoista (jälleenmyyjä antaa nämän)
GR	**ΔΕΛΤΙΟ ΤΑΥΤΟΤΗΤΑΣ**	Η καρτέλλα αυτή μαζί με τους όρους εγγυήσεως (που θα προμηθευθείτε από το κατάστημα που αγοράσατε την συσκευή) αποτελούν το πλήρες πιστοποιητικό εγγυήσεως της συσκευής σας

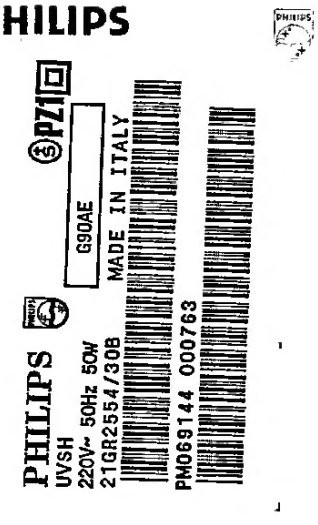

Printed in Italy by G.S.F. 91/12 11 10 9

RC 3119 106 1901.2

Downloaded from www.Manualslib.com manuals search engine